



PREMIER COMPACT

CRUISE & FERRY PASSENGER LIFEJACKET SOLUTION ↓

Since the Crewsaver Premier was introduced in July 2010, the lifejacket has led the way in passenger and crew lifejacket safety.

Driven by regulation changes for lifejacket accessibility on cruise ships, and customer demand for reduced bulk and improved storage options, Crewsaver has designed the Premier Compact - a 49.2% smaller alternative (by volume) to the original Premier.

The Premier Compact provides the crucial, continued safety and performance features of the previous and delivers improved storage options due to its significantly reduced volume and easy-stack profile. A unique design of the neck opening allows for increased wearer comfort, while durability is assured by the use of tried and tested quality components.

FEATURES

- MED APPROVED
- EFFICIENT USE OF STORAGE SPACE AT ONLY 17.4L - 49.2% SMALLER ALTERNATIVE TO THE ORIGINAL PREMIER
- EASY PULL-OUT PILLOW FOR INTUITIVE DONNING
- A FOAM CUT OUT FOR THE BUCKLE ENSURES EASY STACK-AND-STOW, NO FOLDING OR MANIPULATION REQUIRED
- SACRIFICIAL STITCH AT THE END OF THE WAIST BELT TO ALLOW IT TO RUN FREE IF CAUGHT, HELPING TO PREVENT SNAG HAZARDS
- IMPROVED COMFORT AND FIT AROUND THE NECK WITH RE-ENGINEERED NECK APERTURE
- BUDDY LINE AND WHISTLE STORED IN RECESSED POCKET
- HIGH VISIBILITY FABRIC, FOAM AND WEBBING ARE A PROVEN SUCCESS IN THE FIELD
- WAIST BELT DESIGNED TO FIT CHEST GIRTH OF 1750MM
- CLEAR ID WINDOWS FOR VESSEL IDENTIFICATION



49.2% smaller alternative to the original Premier.

PREMIER COMPACT

CRUISE & FERRY PASSENGER LIFEJACKET SOLUTION



Ordering Information

TECHNICAL DATA	
Newtons	Minimum 150 N
Type	Lifejacket
Flotation	Foam

Product Number	Product Name
10670	Premier Compact
12672	Premier Compact with Universal Recessed Light and Integrated Sensor
12679	Premier Compact with Universal Surface Light and Integrated Sensor
13672	Premier Compact with CAL Recessed Light (Alkaline)
13679	Premier Compact with CAL Surface Mounted Light (Alkaline)
10671	Premier Compact Crew - Yellow
12690	Premier Compact Crew with Universal Recessed Light and Integrated Sensor - Yellow
12691	Premier Compact Crew with Universal Surface Light and Integrated Sensor - Yellow
13690	Premier Compact Crew with CAL Recessed Light - Yellow
13691	Premier Compact Crew with CAL Surface Mounted Light - Yellow

Accessories

Product Number	Product Name
10276	Universal Light SOLAS with Integrated Sensor and Recessed Adaptors
10278	Universal Light SOLAS with Integrated Sensor and Surface Mount Bracket
10032	Crotch Straps

FEATURES

Reflective tape (total of eight pieces)

Additional buckle for enhanced security

Whistle on the edge of the front foam on a reverse chamfer to reduce bulk when packed

Buddy line in self close pocket attached to the edge of the front foam on a reverse chamfer to reduce the bulk when packed

Recess in the back of jacket to allow efficient stacking

Flush recess light housing with only the light dome exposed. Dome fits into chin recess when stacked

Extended waist belt

Clear ID Windows

Chamfered edge to reduce snagging on Evacuation Systems




PREMIER COMPACT


CRUISE & FERRY PASSENGER LIFEJACKET SOLUTION



PACKED DIMENSIONS (BASED ON ADULT SIZE)

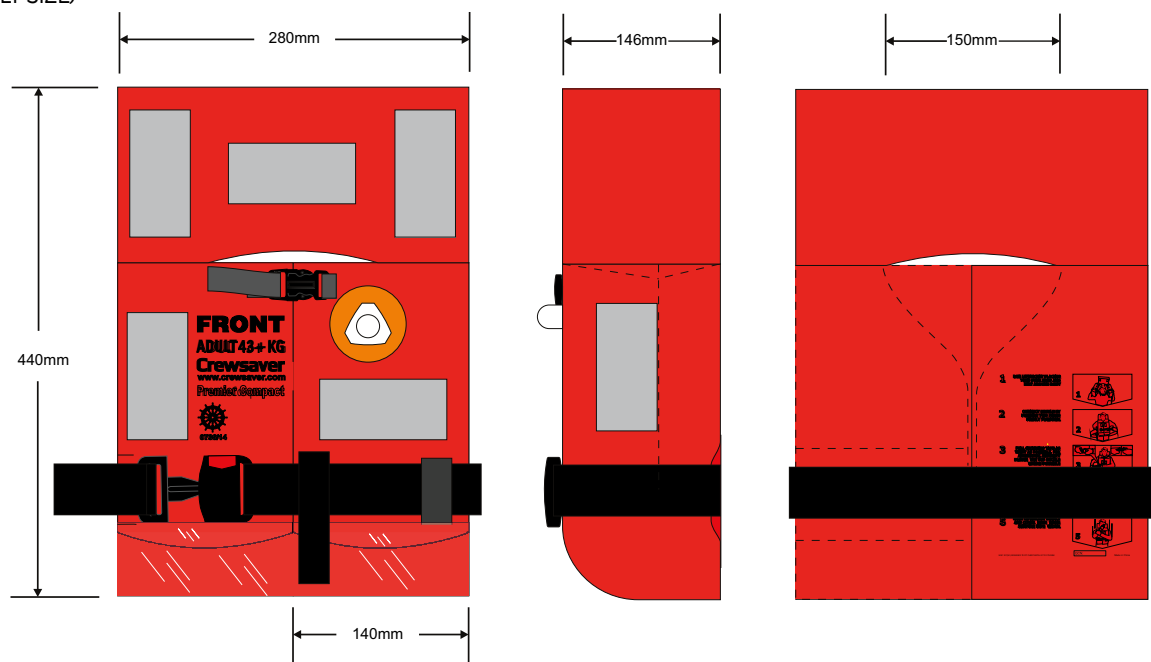

STORED JACKETS

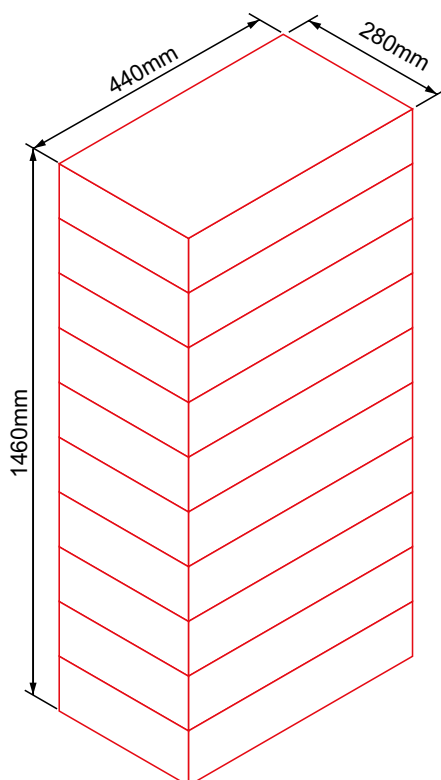

PREMIER COMPACT

CRUISE & FERRY PASSENGER LIFEJACKET SOLUTION ↓

10X Adult Lifejackets


Premier Compact

=*0.182 m³ Per Jacket

Original Premier 2010

=*0.300 m³ Per Jacket

*Packaging Volumes Dependant On Light Type

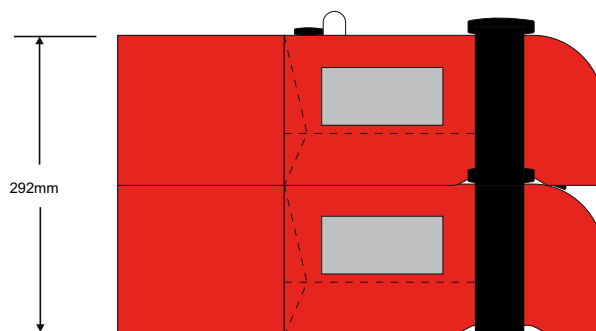

CREW OPTION

The Premier Compact is also available in an identical 'Crew' design, manufactured in a distinctive yellow colour scheme specifically for the ship's crew, allowing passengers to easily identify them in the event of an emergency.



APPROVALS

MED Approved. IMO Resolution MSC.81(70), Part 1 as amended by Resolution MSC.200(80), MSC.207 (81), MSC.218 (82), MSC.323 (89) and MSC.378 (93)



 **survitec**

GET IN TOUCH

Phone +44 (0) 1329 820 000

Email crewsaver.sales@survitecgroup.com

www.survitecgroup.com

Survitec House, Lederle Lane, Gosport, Hampshire, PO13 0FZ