




Mfr. Model # SDAL-RED-38ST-KD

BRADY Padlock: Keyed Different, Aluminum, Std Body Body Size, Steel, Std, Red, 1 Pack Size, Aluminum

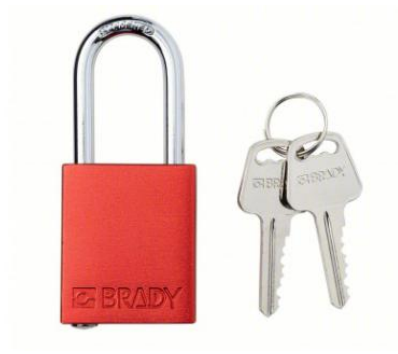

Product Description

Corrosion-resistant aluminum-body LOTO padlocks are resistant to chemicals, oil, ultraviolet (UV) light, high temperatures, and moisture. They are stronger than plastic-body padlocks.

Aluminum lock bodies are corrosion-resistant for use in a variety of indoor and outdoor settings, including those with exposure to chemicals, oil, UV radiation, high temperatures, and moisture.

Steel shackles are heavy-duty and made for use in harsh weather environments or where impact is a concern.

Keyed Different padlocks that do not share a common key. They are used when multiple workers in the same location each need to secure an energy source. Keyed-different padlocks reduce the risk of one worker inadvertently removing another worker's lock.

Brand **BRADY**

Body Color **Red**

Padlock Body Material **Aluminum**

Body Height **1-13/16 in**

Body Width **1-1/2 in**

Display Sell UOM **EA**

Features

Each Padlock Keyed Differently; Key-Retaining Feature Prevents the Key from being Removed until the Shackle is Closed; Retains Engraved Key Codes

Header **None/No Header**

Includes **(1) Key; (1) Padlock**

Non-Removable Key **Yes**

Control Key Registration Required **No**

Shackle Diameter **1/4 in**

Shackle Length **Standard**

Padlock Shackle Material **Steel**

Vertical Shackle Clearance **1-1/2 in**

Manufacturer Part Number **SDAL-RED-38ST-KD**

Country of Origin **China (subject to change)**